



# PREMIER'S HIGH VOLTAGE BREAKDOWN TESTER

Model: PE 100 Series

## OPERATING INSTRUCTIONS:

### A. To set the current limit

1. Press the SET button on the unit.
  2. Using the UP/ DOWN keys, navigate to the option  $\bar{n}\bar{A}\bar{n}\bar{P}$  (mA).
  3. Press the SET button, the first display starts blinking.
  4. Using the UP and DOWN keys, adjust the required value in mA.
  5. Press the SET button, the first display stops blinking, and then press the ESC button.
- The required current limit is now set.

### B. To set the timer

1. Press the SET button on the unit.
  2. Using the UP/ DOWN keys, navigate to the option  $\bar{t}\bar{i}\bar{n}\bar{E}$  (TIME).
  3. Press the SET button, the first display starts blinking.
  4. Using the UP and DOWN keys, adjust the required value in seconds.
  5. Press the SET button, the first display stops blinking, and then press the ESC button.
- The required time is now set.

### C. To reset the timer

1. Press the SET button on the unit.
  2. Using the UP/ DOWN keys, navigate to the option where 2<sup>nd</sup> display shows  $\bar{r}\bar{S}\bar{t}$  (Reset) and the top display shows  $\bar{Y}\bar{E}\bar{S}$ .
  3. Press the SET button.
- The timer is now reset to 0.

OR

1. Press the ESC button for 5 seconds when test is off (from version 1.2 onwards only)

### Other Functionalities (Factory Programmable):

- Change the time base to seconds, minutes or hours or disable timer.
- Change Buzzer setting to - 'alert on test fail' or disable buzzer.  
(Default setting is Buzzer on when HV on for safety purpose)



# PREMIER'S HIGH VOLTAGE BREAKDOWN TESTER

*Model: PE 100*

## HOW TO USE AN HV TESTER:

1. Connect the HV probe to the Line & Neutral Pin of the appliance plug.  
(Short Line and Neutral using a wire)
2. Connect the Ground probe to the body of the appliance.
3. Keep the dimmer at minimum position.
4. Start the HV test and gradually increase the voltage to the test voltage specified (depending on product to be checked)
5. Current limit is set as per the product to be checked (For eg. For domestic appliances it is 5 mA)
6. Time duration for the test is 60 sec (default).
7. HV tester will indicate pass or fail for the sample.

## SCAN FOR VIDEO DEMO:



**NOTES :**

[www.premierin.com](http://www.premierin.com)

Contact : Premier Electrosystems, 3, Planet Ind Est, Subhash Road, Vile Parle E, Mumbai- 057  
Email : [feedback@premierin.com](mailto:feedback@premierin.com) Tel : +91 99 88 11 73 72 Website : [www.premierin.com](http://www.premierin.com)